

Release Note

Software Version：2.6.0.1142

Models：A32i

Date：2022.7.29

Content

Content **2**

1 Revise History **3**

2 Release Version 2.6.0.1142 ..... **4**

2.1 New Features 4

2.2 Optimization 4

2.3 Bug Fix 4

2.4 New Features Description 5

2.5 Optimization Description 10

1 Revise History

No.	Version	Release Time
1	2.6.0.1142	2022.7.29

2 Release Version 2.6.0.1142

Models	Software Version	Comment
A32i	2.6.0.1142	

2.1 New Features

1. Add playlist function to radio page

2. Add extension management functions on the device side, including management terminals and terminals to be managed

3. Add the function of vibration group on the device side

4. Add hotspot setting function on the device side

5. Add local information display on the device side

2.2 Optimization

1. Administrator mode, add icon indication to the status bar

2. Improve partition number support to sort by numbers

3. Improved broadcast is divided into immediate broadcast and timing broadcast

4. Improve music broadcast support to set volume and priority

5. Improve the unattended function

6. The hotspot function is enabled by default for line 1, and the other lines are disabled by default

7. Expand the number of hotspot extensions to 50

8. Optimize intercom, broadcast, management and other interfaces

2.3 Bug Fix

1. Fix the problem that the broadcast task name is too long and not displayed completely


2. Fix the app crash problem caused by some situations


2.4 New Features Description

1. Add playlist function to radio page

Function Description: After adding a playlist, the user can select the playlist in a play task to add multiple music at once

Realize settings: In the [**Paging System**], set it in [**Broadcast**] >> [**PlayList**], add a custom name in [**List Name**], and click the file in [**File List**]. After clicking, the selected file will appear in [**Selected**] on the right side. After clicking Finish, you can view the successfully added playlist in the playlist. Click in [**More**] to view playlist information, or edit an existing playlist.

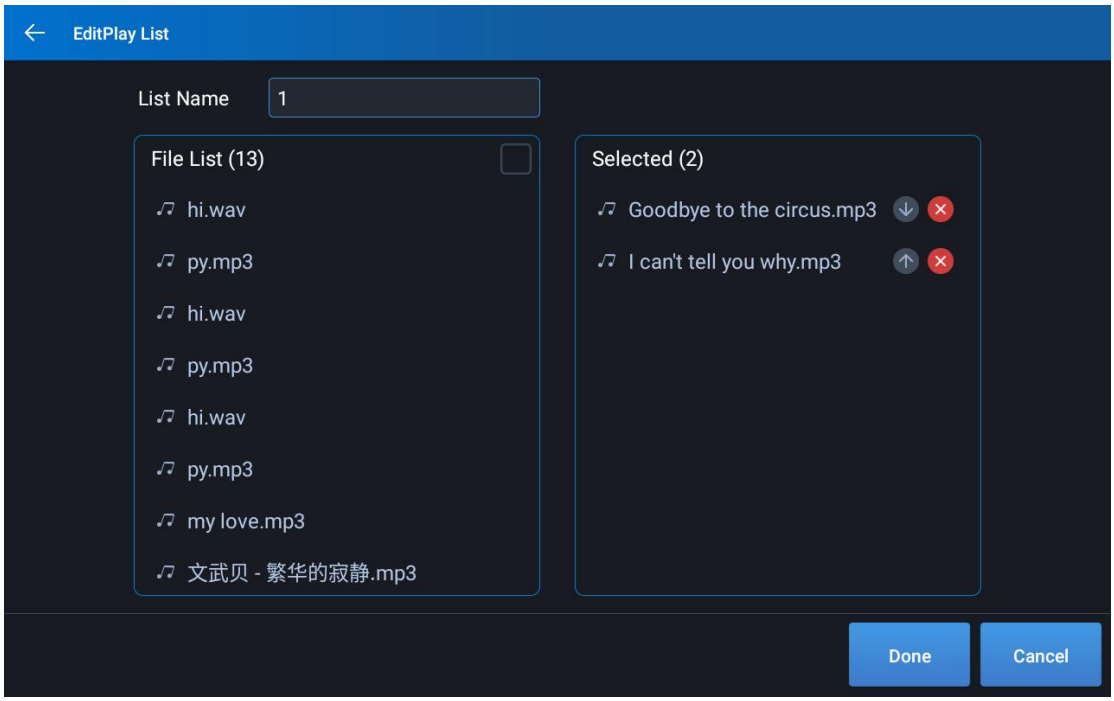


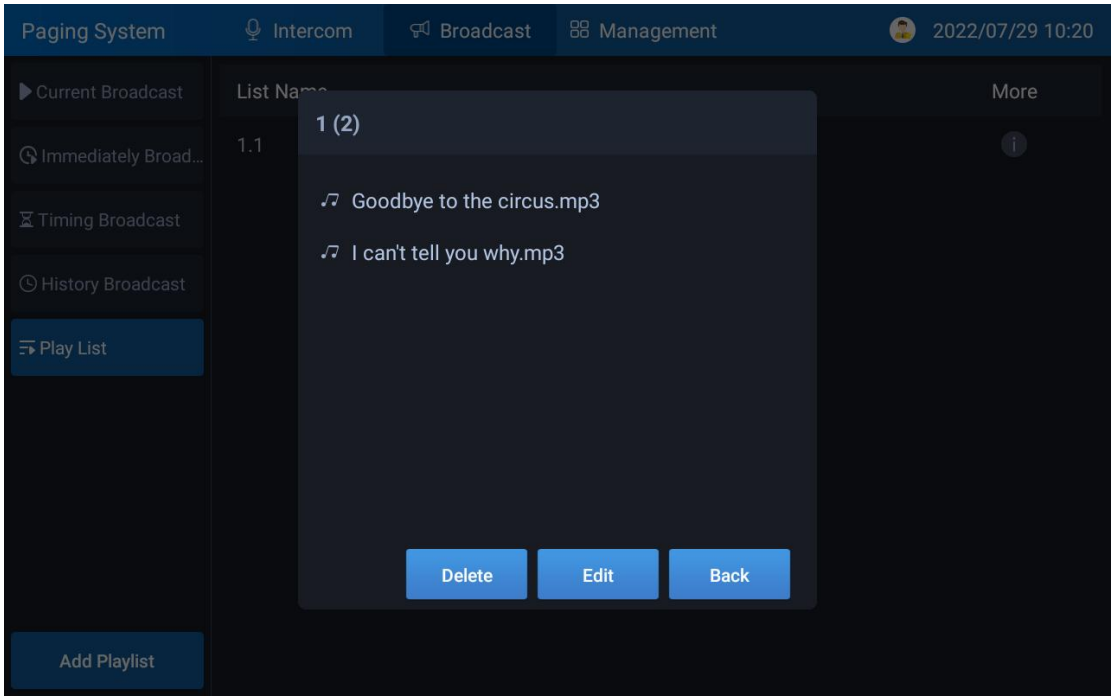


2. Add extension management functions on the device side, including management terminals and terminals to be managed

Function Description: It can manage the extension devices connected to the server, upgrade, restart, edit accounts, set up groups and other functions, and can realize the hotspot management function on the web page on the device.

Realize settings: Set it in the [**Management**] of the Paging System. When a new device is connected for the first time, it can be viewed on the interface of [**UnManaged Extension Information**], and it can be moved to [**Managed Extension Information**].

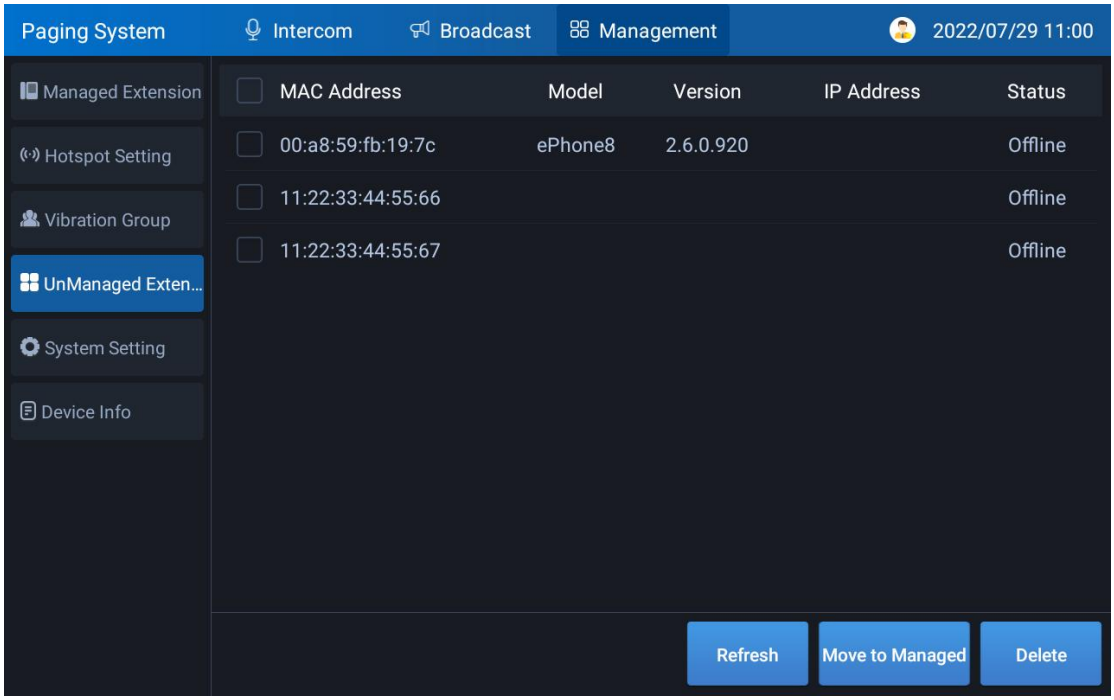

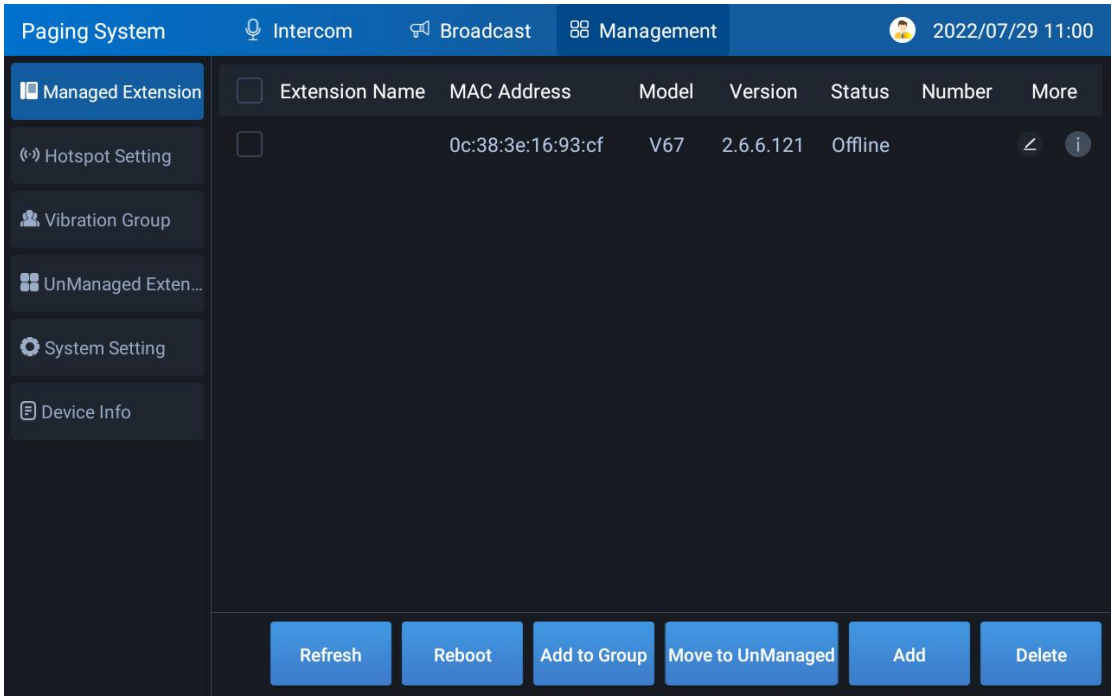



3. Add the function of grouping ring on the device side

Function Description: The terminals added to the same ringing group can realize the ringing of all terminals in the group at the same time when an incoming call is received. When a terminal answers, other terminals stop ringing.

Realize settings: To set in the [**Management**] of Paging System, you can click to add a new group and add terminals in the lower right corner of [**Vibration Group**],

or you can click [**Add to Group**] in [**Management**] to add a terminal to an existing group.

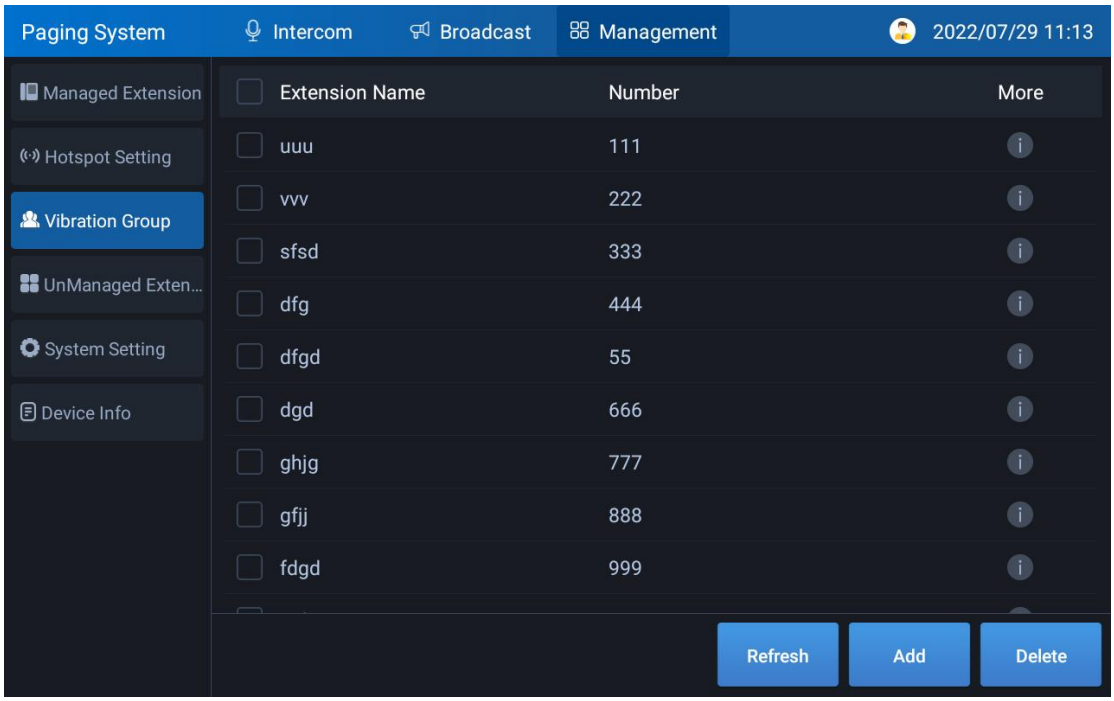

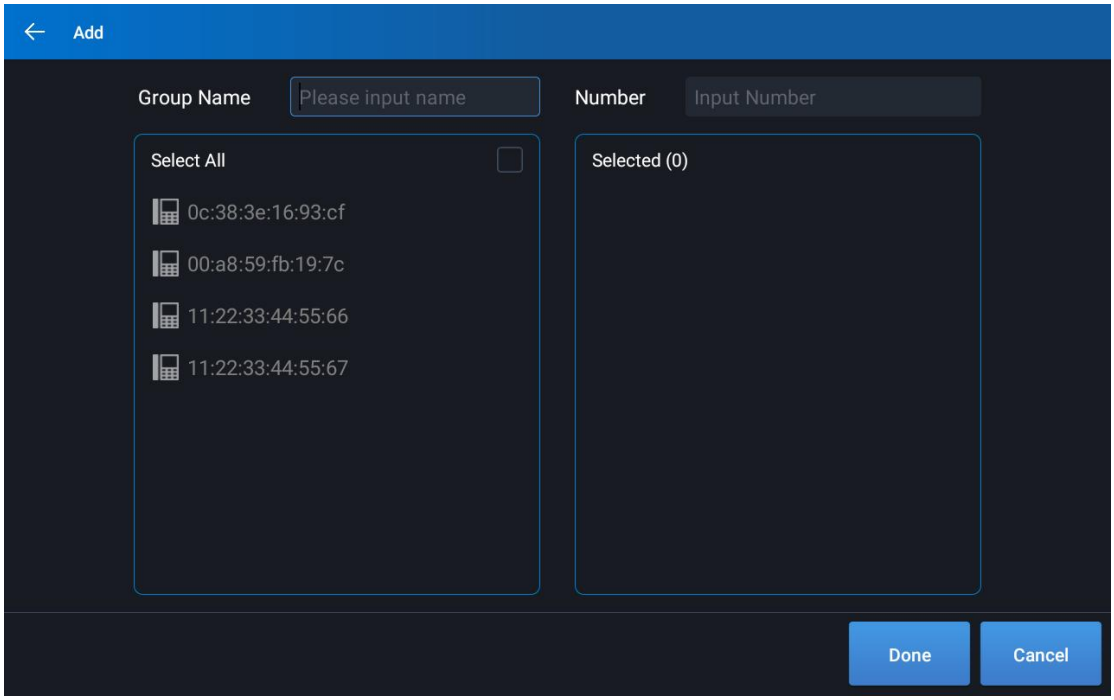


4. Add hotspot setting function on the device side

Function Description: The hotspot function can realize group ringing and expand the number of SIP accounts. In the management of Paging System, the same hotspot setting function as the web page can be realized, and the device can be used as a

Add: 13th Floor, Building 2, Runzhi R D Center, in'an Street, Bao'an District, Shenzhen, Guangdong, China
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: support@fanvil.com www.fanvil.com

server or a client.


Realize settings: In the Paging System, set it in [**Management**] >> [**Hotspot Setting**].

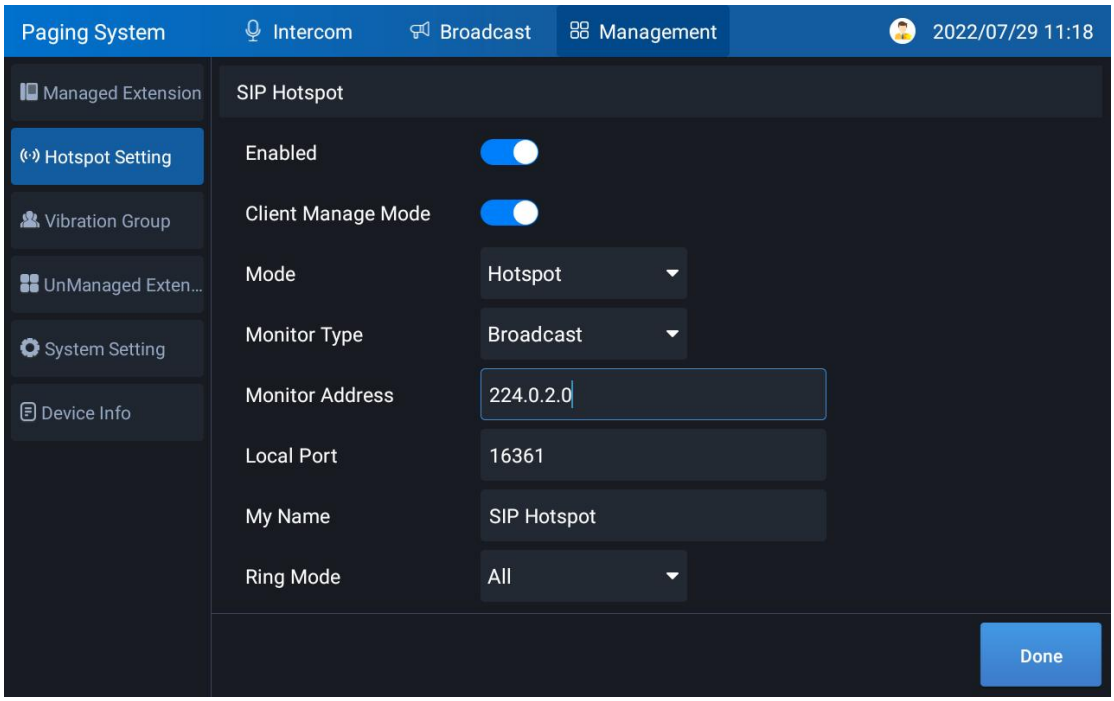

5. Add local information display on the device side

Function Description: Support viewing the device information and registered numbers directly in [**Management**].


Realize settings: Check it in [**Management**] >> [**Device Info**] in Paging System.

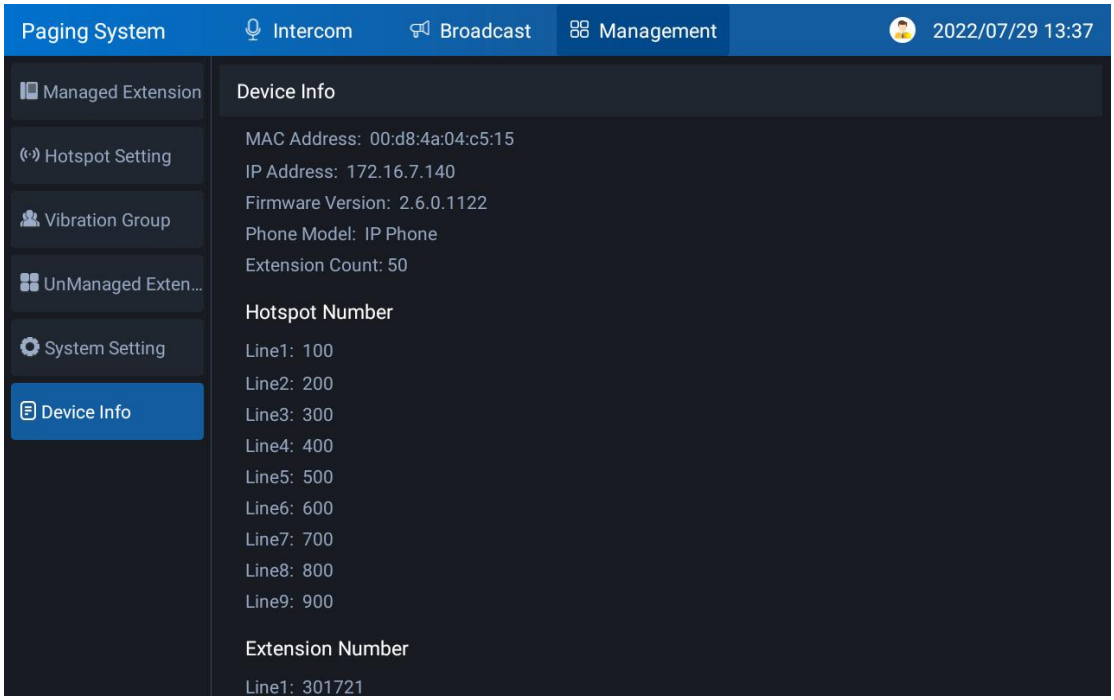

2.5 Optimization Description


1. Administrator mode, add icon indication to the status bar

Function Description: When the administrator mode is enabled, the administrator icon will appear in the status bar in the upper right corner.

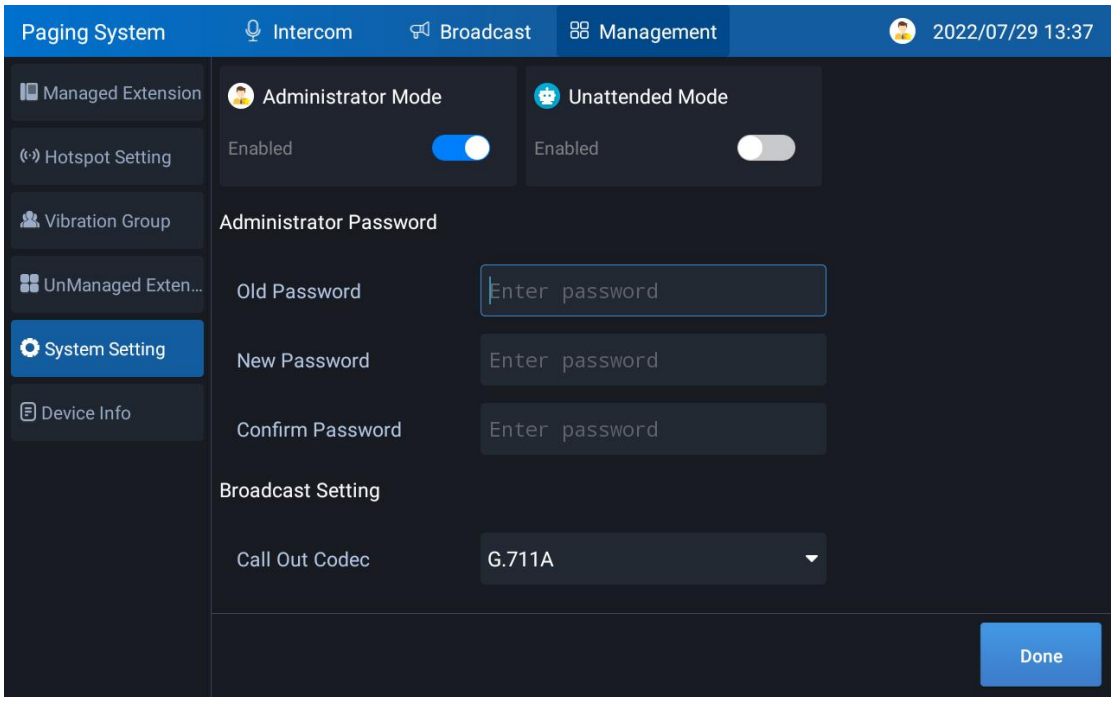

2. Improve partition number support to sort by number size


Function Description: Devices are displayed in numerical order from left to right, with online devices before offline devices.

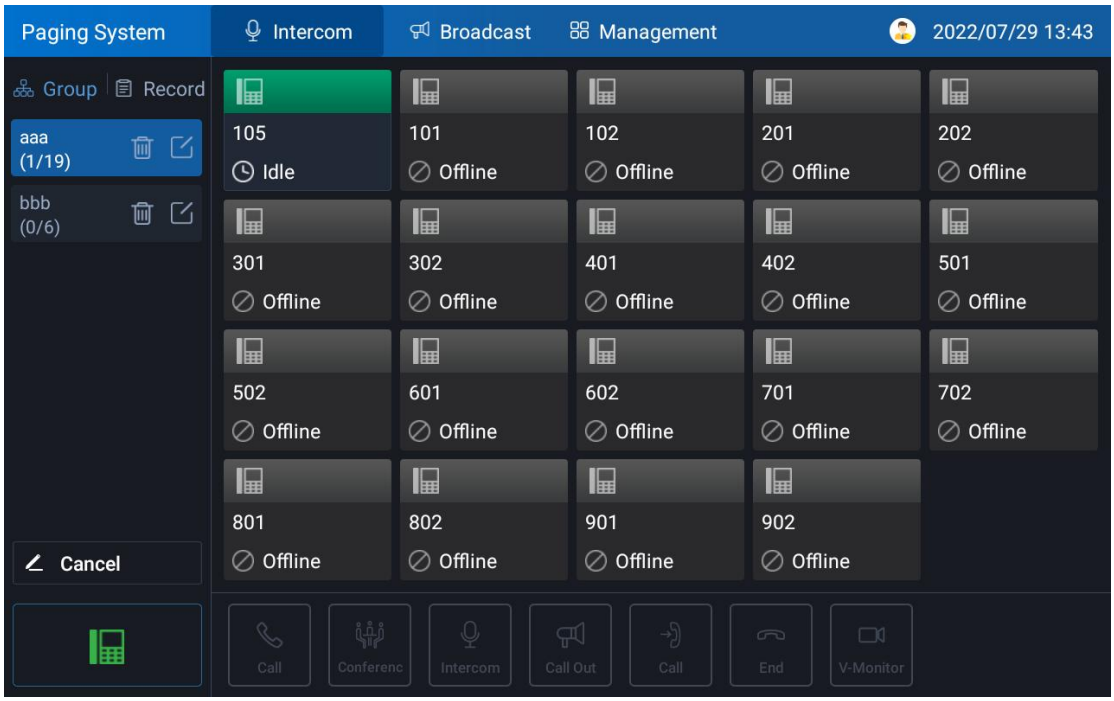



3. Improved broadcast is divided into immediate broadcast and timing broadcast

Function Description: Support to choose to broadcast to the terminal immediately or choose to set a timing broadcast.

Realize settings: In the [Broadcast] of Paging System, you can view [Immediately Broadcast] and [Timing Broadcast]. You can click the Add Task in the lower left corner to add the two types of broadcasts in the order of [Message Set] >> [Add Devices] >> Click [Complete]

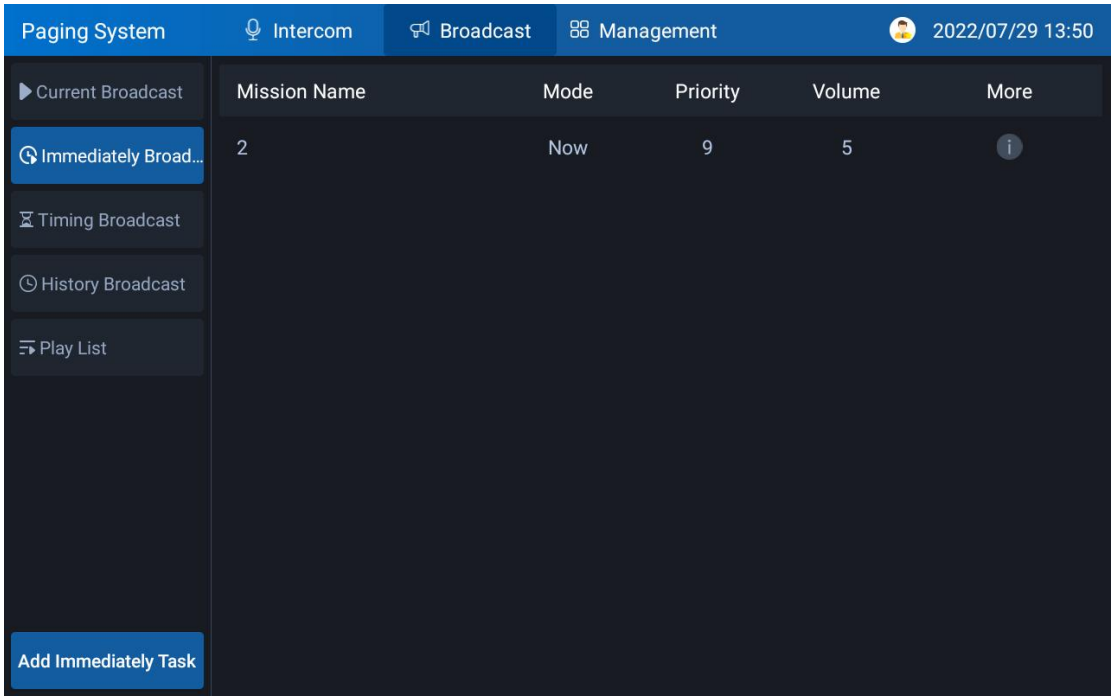
Paging System
Intercom
Broadcast
Management
2022/07/29 13:50
Current Broadcast
Immediately Broad...
Timing Broadcast
History Broadcast
Play List
Mission Name
Mode
Priority
Volume
More
2
Now
9
5
Add Immediately Task

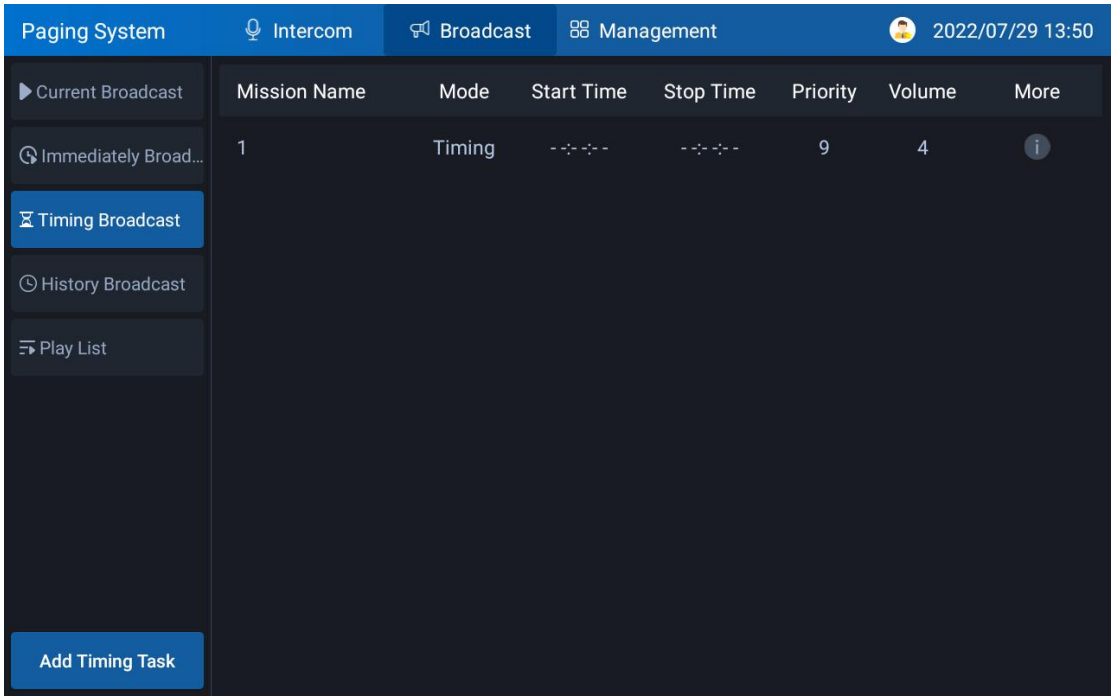

Paging System
Intercom
Broadcast
Management
2022/07/29 13:50
Current Broadcast
Immediately Broad...
Timing Broadcast
History Broadcast
Play List
Mission Name
Mode
Start Time
Stop Time
Priority
Volume
More
1
Timing
- -:- -:- -
- -:- -:- -
9
4
Add Timing Task

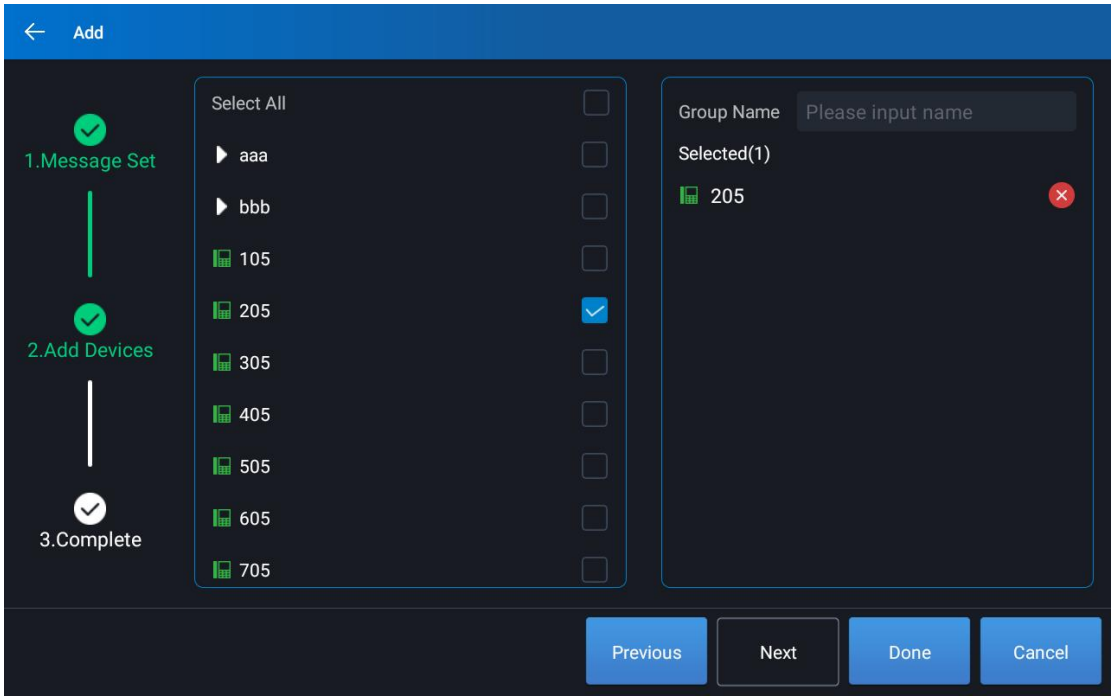


4. Improve music broadcast support to set volume and priority

Function Description: When adding broadcast tasks, the volume and priority can be set .

Realize settings: When adding a task, you can set the volume and priority in [Message Set]. After the setting is completed, you can view it in the broadcast interface.

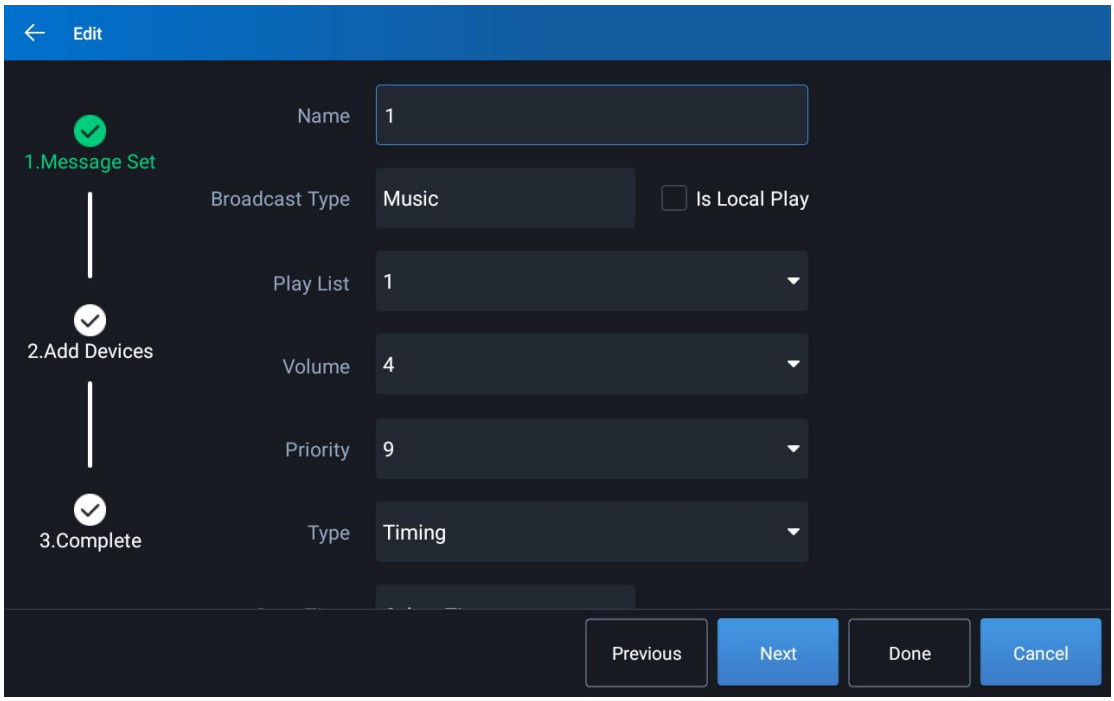

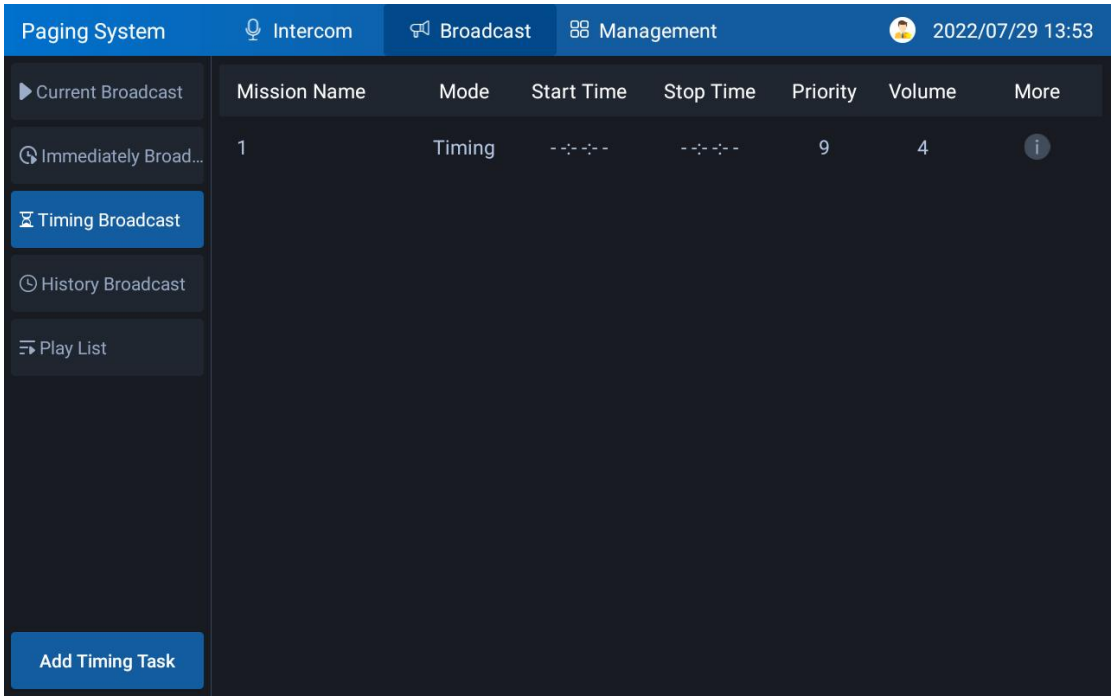

5. Improve the unattended function

Function Description: When unattended mode is enabled, the terminal cannot be operated.

